


# WEBER DCOE COLD START DEVICE ELIMINATION KIT



Thank you for purchasing cold start elimination kit for the WEBER DCOE series of carburetors.

## Removing covers

- 1) Unscrew jet inspection cover
- 2) Locate and unscrew five screws on top cover  
Pay attention one is shorter
- 3) Remove top cover, pay attention to not bend the float
- 4) Locate and unscrew two screws holding cold start device
- 5) Remove starting device

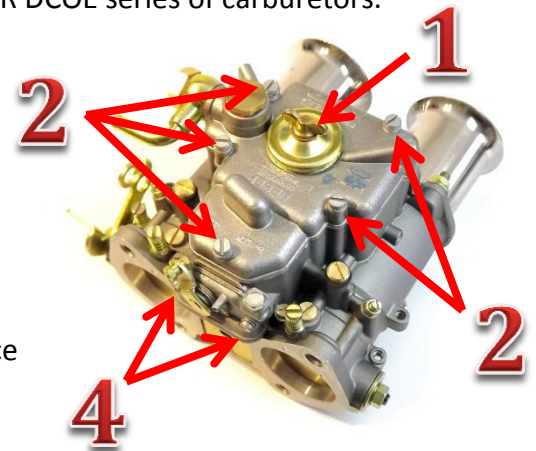

## Removing Cold Start circuit part

- 6) Locate and unscrew both Starting Jets
- 7) Unsecure spring retainer
- 8) Remove spring and plunger
- 9) Put spring and retainer aside for reuse




## Fitting blocking jets and plungers

- 10) Fit spring on blocking plunger
- 11) Fit blocking plungers and jets
- 12) Make sure plunger is well pressed down
- 13) Secure spring retainer in place
- 14) Tight well both blocking jets



## Assembling covers

- 15) Put new top cover gasket, check correct float level setting
- 16) Put blocking cover with short screws
- 17) Fit top cover on place, pay attention to one short screw
- 18) Turn each screw few turns to allow top cover seat down
- 19) Tight all screws in cross pattern

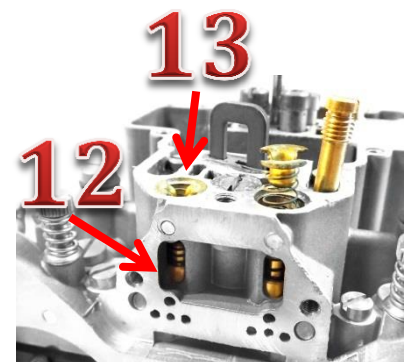

Fuel Leveling – please see instruction in Service manual

[www.carbparts.eu/dcoe\\_service\\_manual.pdf](http://www.carbparts.eu/dcoe_service_manual.pdf)



**CarbDeal**  
Selling carburetor parts since 2005

